


INTERRUTTORE PEDALE  
PEDAL-SWITCH  
INTERRUPTEUR-PEDAL

**Amp.16**


Cod. 114.11

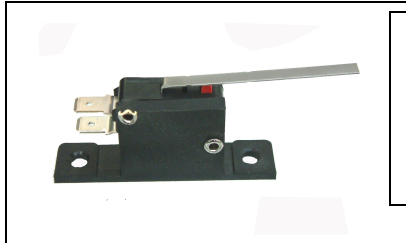

INTERRUTTORE PEDALE  
PEDAL-SWITCH  
INTERRUPTEUR-PEDAL

**Amp. 8**

Cod. 180.05

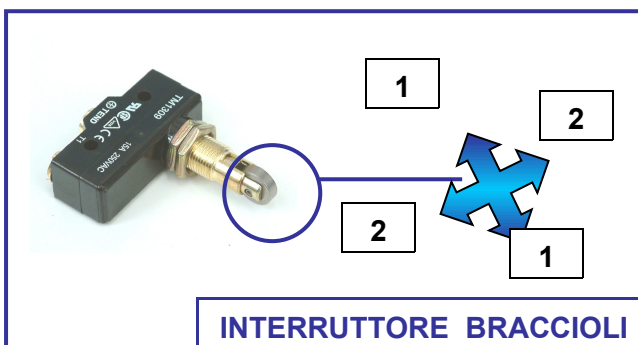

INTERRUTTORE BRACCIOLI & PEDALI  
ARM & PEDAL SWITCH  
INTERRUPTEUR PEDAL &  
JEANNETTE

Cod. 104.15

PULSANTE  
PUSH-BUTTON  
BOUTON

0 > 1 > 0

Cod. 151.52

PULSANTE -STOP  
STOP PUSH-BUTTON  
BOUTON DE STOP

0 > 1

Cod. 151.60

INTERRUTTORI PER PULSANTI  
SWITCHES FOR BUTTONS  
INTERRUPTEURS POUR BOUTONS

BRETER

Cod. 151.41

N.C

N.O

Cod. 151.61

TELEMECAN

N.O

N.C

Cod. 151.135

Cod. 151.133

